
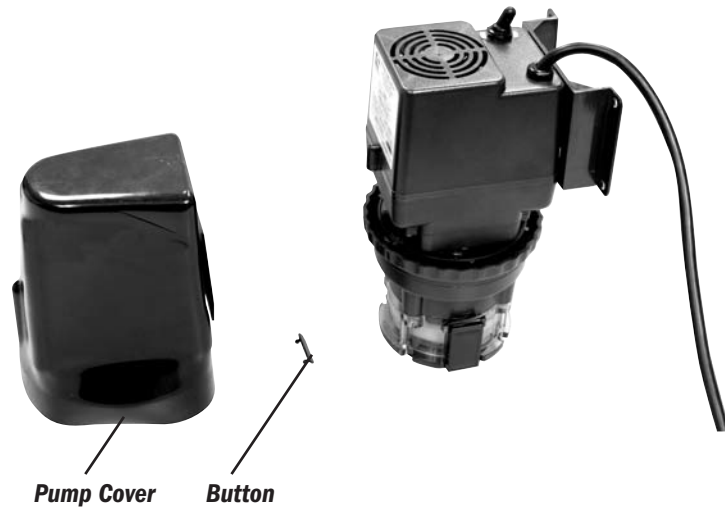


Pump Cover Installation Instructions

NOTICE: Before installing or servicing the pump, read the pump manual for all safety information and complete instructions. The pump is designed for installation and service by properly trained personnel.

WARNING Must be installed with the Stenner Rain Roof; part number MP90000.

CAUTION To be used only with pumps that run intermittently. 25% duty cycle max (10 min. ON, 30 min. OFF). Maximum ambient operating temperature is 104° F (40° C). Continuous operation, especially in direct sunlight, will cause the pump to shut down due to thermal overload protection.

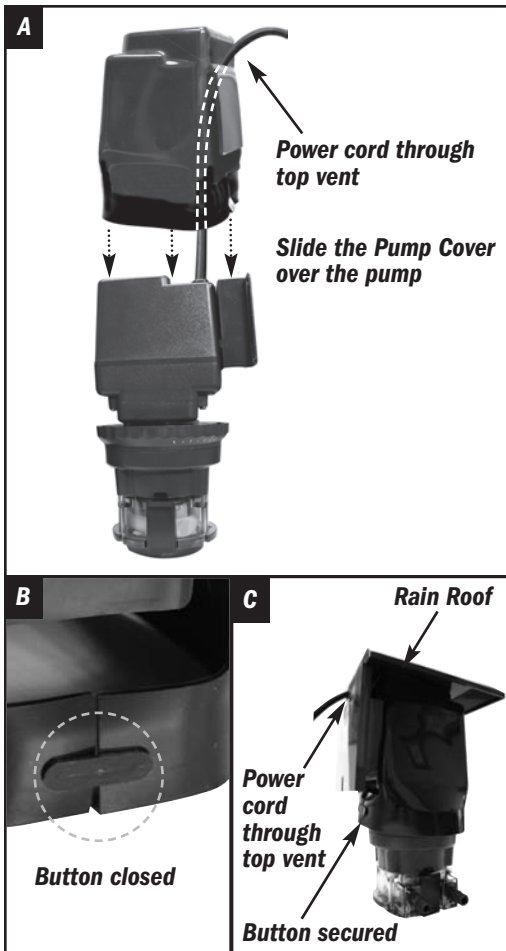

- 1 Turn off unit and unplug the pump.
- 2 Remove the rain roof (if already installed).
- 3 Insert the power cord through the bottom of the cover and out through the top vent and slide the pump cover over the pump as shown. Ensure that vent intake and exhaust are unobstructed. **Figure A**
- 4 Button cover to secure it. **Figure B**
- 5 Install rain roof. **Figure C**
- 6 Plug unit in and turn pump on.